

# WSA 306 ASV-module

For Smoke control units:

- WSC 304 01
- WSC 304 61
- WSC 4xx
- WSC 520 / 540 / 560

## General information

The smoke detector input can be used for transmitting on a signal from an external fire detecting system (ASV). This requires a potential-free ASV contact and the ASV module.

## ASV OPEN function

To generate a trip (EMERGENCY OPEN) of the Smoke ventilation group actuate the potential-free contact in the ASV. All Smoke ventilation actuators "OPEN" automatically. The ventilation buttons are now out of operation.

## Resetting the ASV OPEN function

Once the ASV central unit has been reset (tripping contact open again), actuate the CLOSED button on the break glass unit or the Reset button in the Smoke control unit (WSC 4xx: on the Smoke group module). The ASV actuators "CLOSE" and the ventilation buttons are operational again.

## ASV CLOSE function

To generate a trip (EMERGENCY OPEN) of the Smoke ventilation group actuate the potential-free contact in the ASV. All Smoke ventilation actuators "CLOSE" automatically. The ventilation buttons are now out of operation. AASV system trip in the break glass unit (actuators move „OPEN“ ) has priority over a ASV CLOSED trip.

## Resetting the ASV CLOSE function

Once the ASV central unit has been reset (tripping contact open again), actuate the CLOSED button on the break glass unit or the Reset button in the Smoke control unit (WSC 4xx: on the Smoke group module). The ventilation buttons are operational again.

## Malfunction message and its remedy


### Malfunction:

The yellow control LED "Malfunction (automatic detector)" is lit when the group ASV connection, monitored by a closed-circuit current, is interrupted / faulty.

### Remedy:

- Ensure that the detector voltage is applied to the measuring point (see Setting the load voltage).
- Check the connection of the terminal resistor (ASV module).
- Check the cables to the ASV.

ALL rights for changes and errors withheld

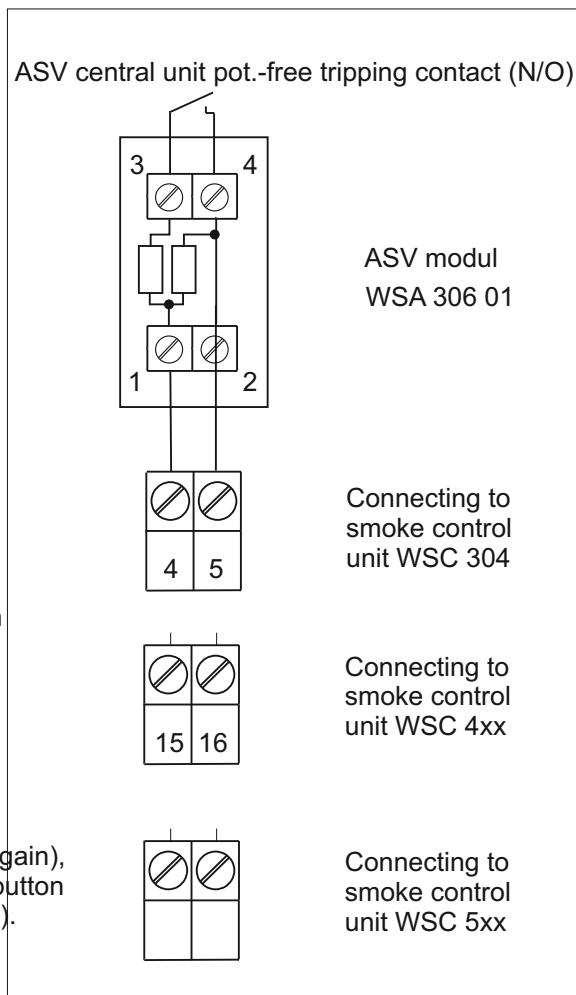

### Germany & Austria:

WindowMaster GmbH  
Hellerweg 180  
D-32052 Herford  
Deutschland

Tel.: (052) 21 6940 500  
Fax: (052) 21 6940 610  
info@WindowMaster.de  
www.WindowMaster.de

### Switzerland:

WindowMaster AG  
Industriestrasse 7  
CH-4632 Trimbach  
Schweiz

Tel.: 062 289 22 22  
Fax: 062 289 22 20  
info@WindowMaster.ch  
www.WindowMaster.ch

### United Kingdom & Ireland:

WindowMaster Control Systems Ltd.  
Kettering Parkway  
Kettering  
Northants NN15 6XR  
United Kingdom

Tel.: 01536 510990  
Fax: 01536 526321  
info@WindowMaster.co.uk  
www.WindowMaster.com

### Denmark, Sweden & other markets:

WindowMaster A/S  
Skelstedet 13  
DK-2950 Vedbæk  
Denmark

Tel.: +45 4567 0300  
Fax: +45 4567 0390  
info@WindowMaster.dk  
www.WindowMaster.com